




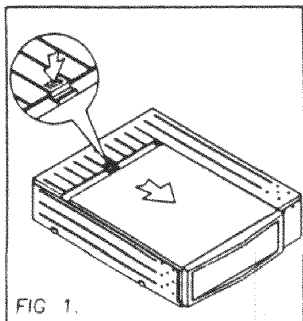


1. PUSH SNAP AND PULL OUT THE DISK BRACKET.

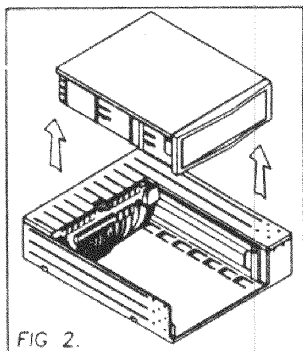

2. TAKE OUT THE BRACKET FROM THE CASE BODY ACCORDING TO THE DIRECTION.

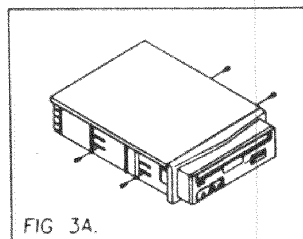

3. A: FOR OPEN STYLE
INSTALL CD-ROM OR OTHER DRIVE
AND FASTEN THE SCREWS.

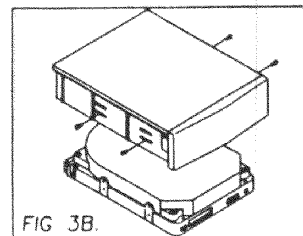

- B: FOR SEALED STYLE
INSTALL H.D.D. AND FASTEN THE
SCREWS.

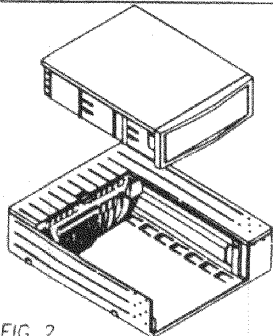


FIG 2.

4. INSTALL THE CONNECTORS, THE REPRESENTATION OF EACH CONNECTOR AS FOLLOWING:

COLOR	BLACK	YELLOW	BLUE	RED
ID SW	COM	4	2	1

(SCSI BOX ONLY)

COLOR	RED	BLACK
RED-LED	+	-

COLOR	RED	BLACK	WHITE
RCA JACK	RIGHT	COM	LEFT

(5.25" BOX ONLY)

COLOR	RED	BLACK	BLACK	YELLOW
DC POWER	+5V	COM	COM	+12V

5. PUT THE BRACKET BACK TO THE CASE BODY .

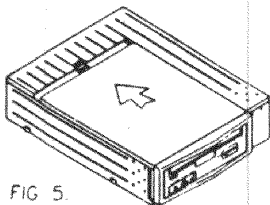


FIG 5.

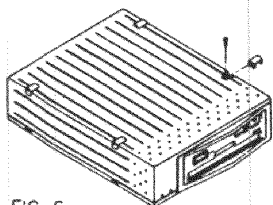


FIG 6.

6. A: PULL OUT THE PAD INDICATED AND USE SCREW AND SCREW DRIVER TO FASTEN THE UPPER CASE, DISK BRACKET AND PAD.
B: IF OPEN UPPER CASE IS NECESSARY, PUT OUT THE 4 PADS IN THE UPPER CASE. THEN THE UPPER CASE COULD BE REMOVED.

7. 3.5" PARALLEL/IDE PIN ASSIGNMENT AND CABLE CONNECTION.
(IDE BOX ONLY)

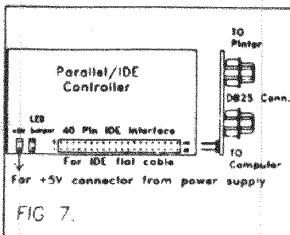


FIG 7.